

MAXIMUM PRODUCT LOAD RATING: 26 kg



FIRST TIME INSTALLATION

- Please read instructions carefully before installation.
- Check the contents of kit. Contact your dealer if any parts appear to be missing or damaged.
- Clean your roof racks or platform prior to fitting the brackets.

INSTALLATION PROCEDURE

Installation of Awning Brackets on TrimHD Bars:

Go to Page 2

Installation of Awning Brackets on LockNLoad Platform:

Go to Page 3

Installation of Awning Brackets on Aero Deck:

Go to Page 4

Installation of Awning Brackets on JetStream, Aero and International T-Slot Bars:

Go to Page 5

Installation of Awning Brackets on other Heavy Duty Bars:

Go to Page 6




TOOLS REQUIRED:

- Tape Measure
- 10 mm Spanner
- 6 mm Allen Key or Torque Wrench

KIT CONTENTS

ITEM	COMPONENT	QTY	ITEM	COMPONENT	QTY
1.	Awning Bracket	x2	6.	M8 Socket Head Cap Screw 25 mm	x4
2.	M8 T-Nut	x4	7.	M8 Socket Head Cap Screw 20 mm	x4
3.	M8 Slot Nut	x4	8.	M6 Hex Bolt	x4
4.	M8 Washer	x12	9.	M6 Washer	x4
5.	M8 Spring Washer	x4	10.	M6 Nyloc nut	x4


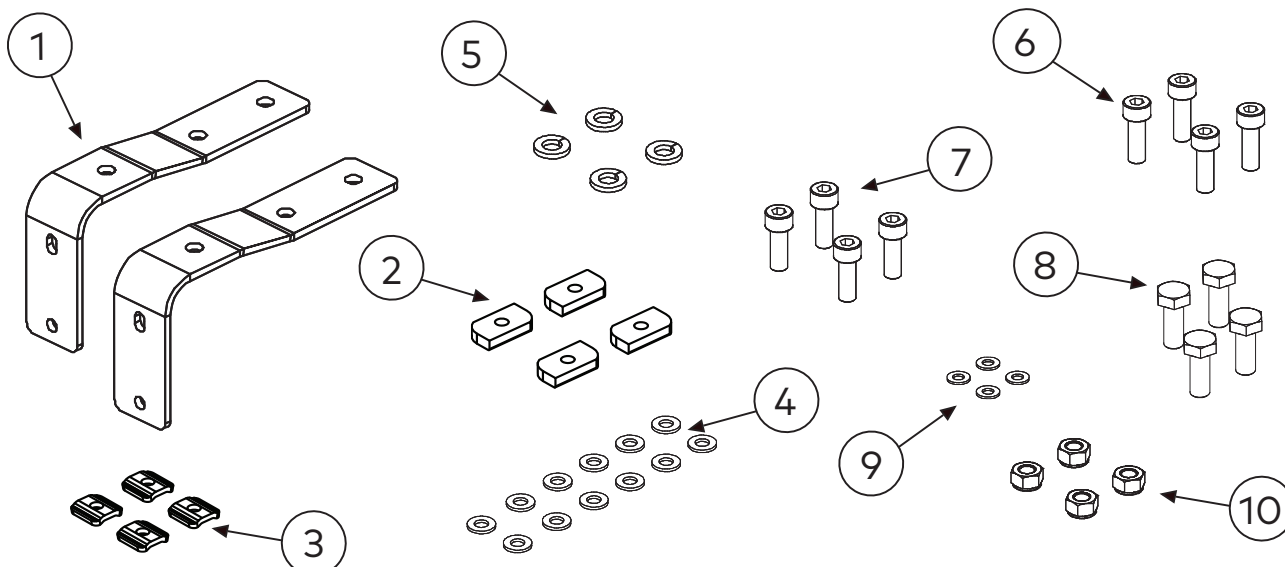


INSTALLING AWNING BRACKETS TO TRIMHD BARS

1

Assemble 1x M8 spring washer, 1x M8 washer onto each **M8 20 mm socket head cap screw** and insert into the top two holes on bracket.

Pre-thread the M8 T-nuts onto cap screws and slide bracket assembly into bar channel.

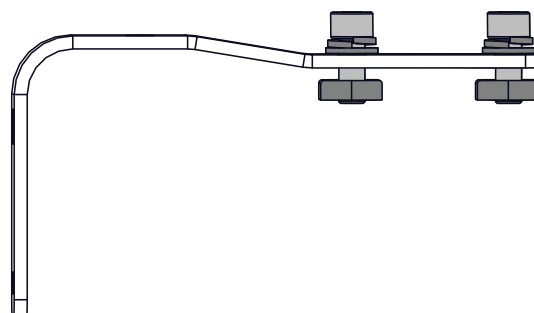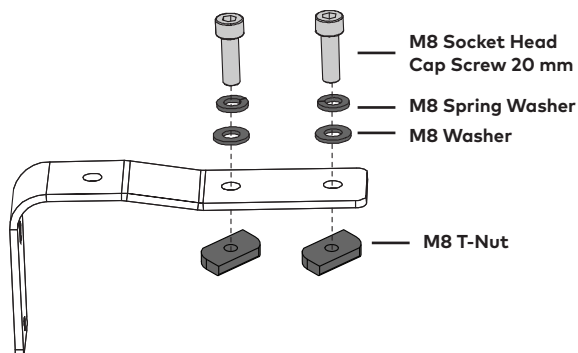


x2

2

Noting the orientation of the awning brackets as pictured, check that awning will not interfere with opening doors once fitted. If there is enough clearance, secure the 2 x awning brackets to the M8 T-nuts in the bar channels as pictured.

Tighten to 4 Nm with a 6 mm allen key or a suitable torque wrench.

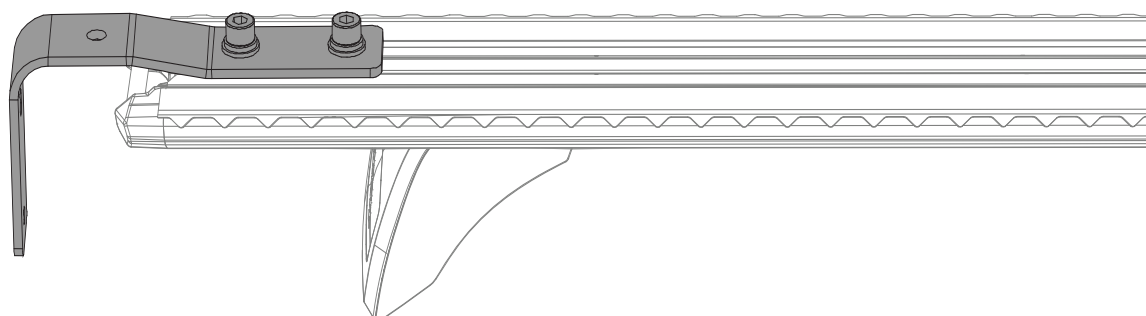



FOR AWNING MOUNTING INSTRUCTIONS, PROCEED TO PAGE 7

INSTALLING AWNING BRACKETS TO LOCKNLOAD PLATFORMS

1

Insert two (2) sets of 2 x M8 T-nuts at an equal distance from platform side into the platform slat cut outs. An allen key can be used to move nuts within platform slat channels.



Use the awning brackets to ensure slot nuts align with holes on the awning brackets. It is best to space brackets as far apart as practical on platform.

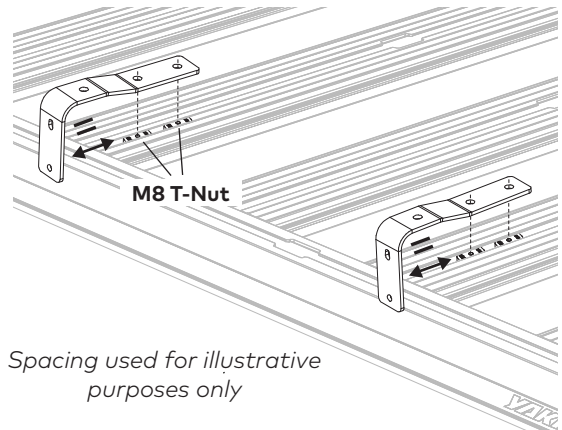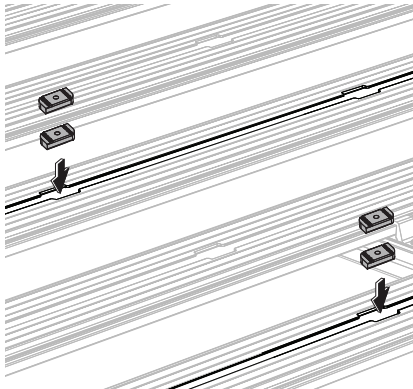

2

Secure the 2 x awning brackets to the M8 T-nuts in the platform slat channels as pictured.

Tighten to 4 Nm with a 6 mm allen key or a suitable torque wrench.

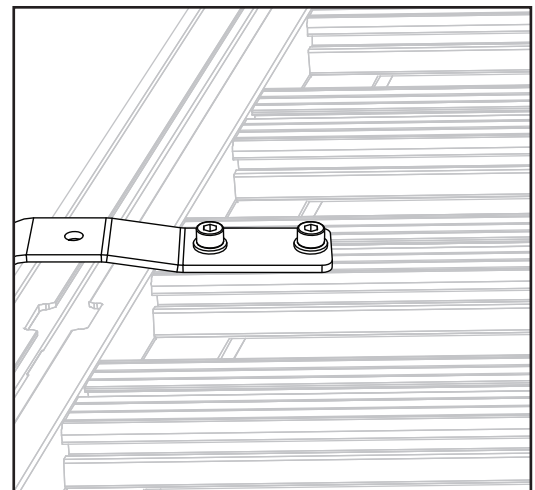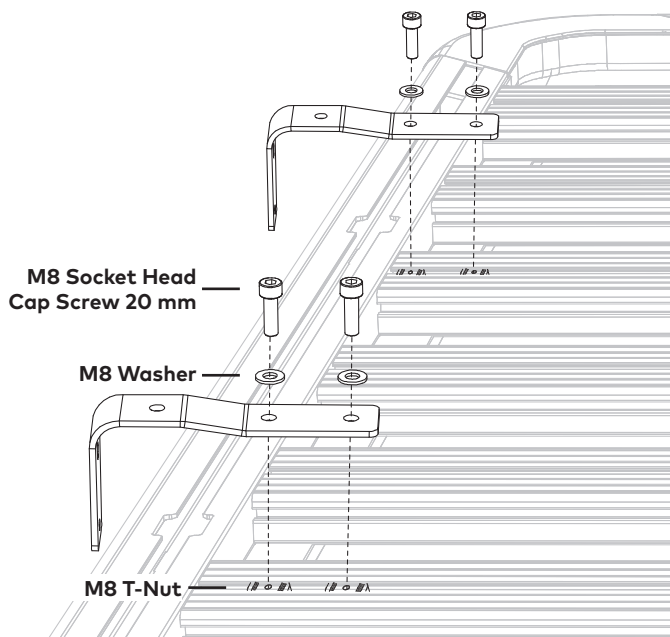



FOR AWNING MOUNTING INSTRUCTIONS, PROCEED TO PAGE 7

INSTALLING AWNING BRACKETS TO AERO DECK

1

Insert two (2) sets of 2x M8 T-nuts at an equal distance from Aero Deck side into the slot cut outs. An allen key can be used to move nuts within slot channels.



Use the awning brackets to ensure slot nuts align with holes on the awning brackets. It is best to space brackets as far apart as practical on the Aero Deck.

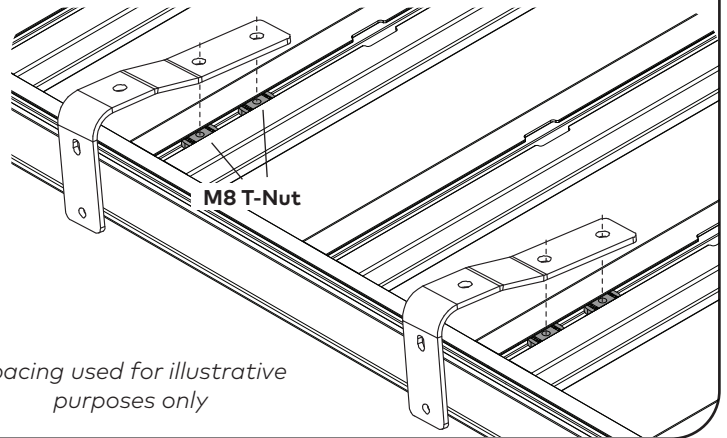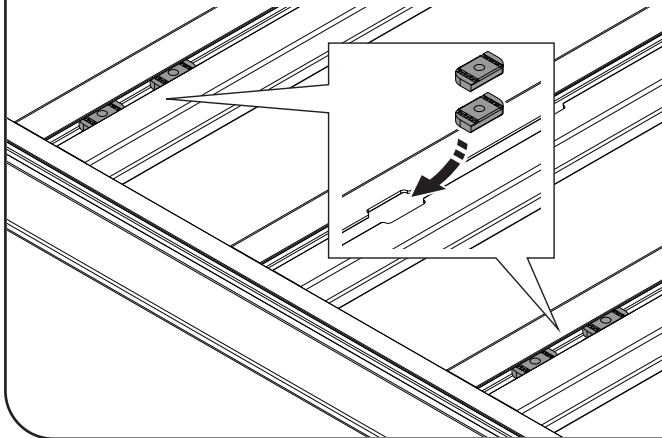

2

Secure the 2 x awning brackets to the M8 T-nuts in the slot channels as pictured.

Tighten to 4 Nm with a 6 mm allen key or a suitable torque wrench.

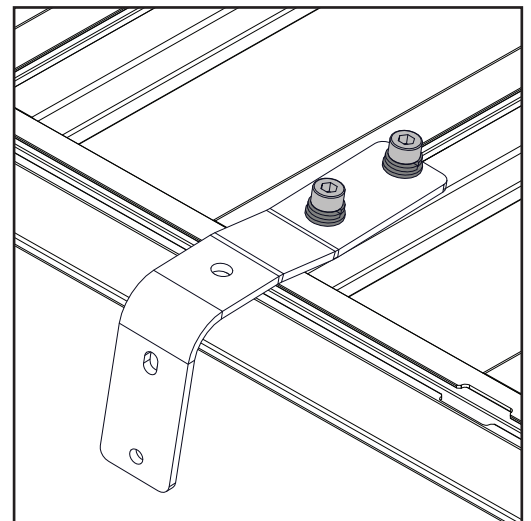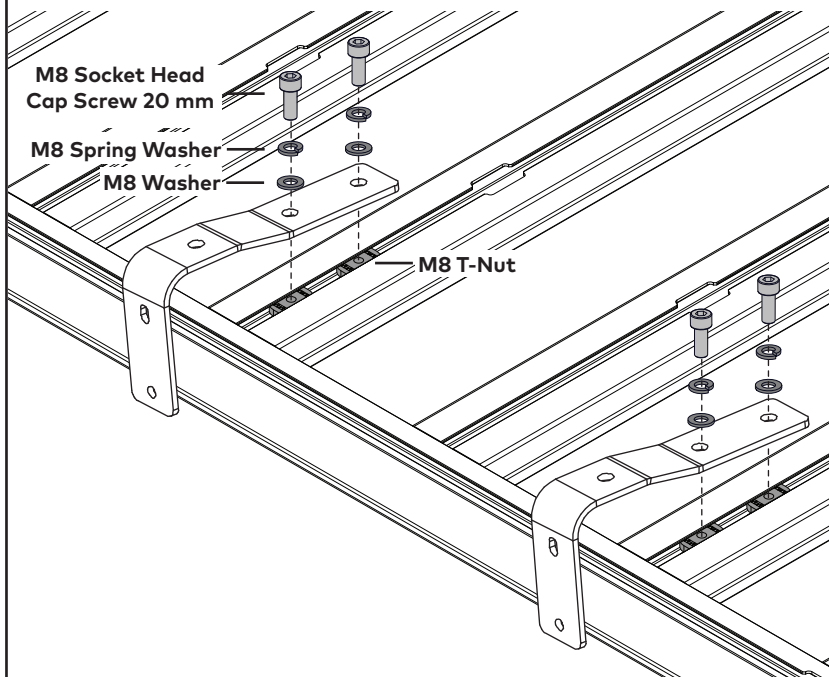





FOR AWNING MOUNTING INSTRUCTIONS, PROCEED TO PAGE 7

INSTALLING AWNING BRACKETS TO JETSTREAM, AERO AND INTERNATIONAL T-SLOT BARS

1

Push rubber infill down and slide 2 x M8 slot nuts in the orientation shown into each bar channel at an equal distance from the ends of a pair of crossbars on the same side of the vehicle. The 6 mm allen key can be used to assist slot nut installation into the channel.



Use the awning brackets to ensure slot nuts align with holes on the awning brackets.

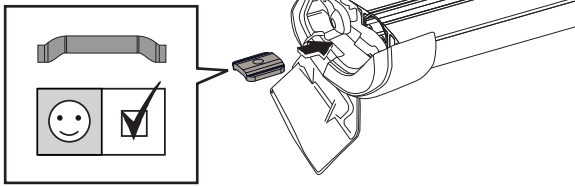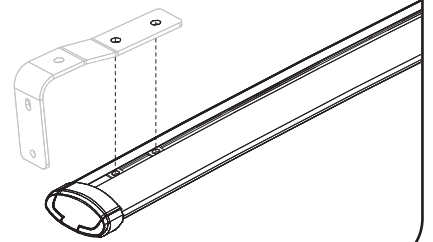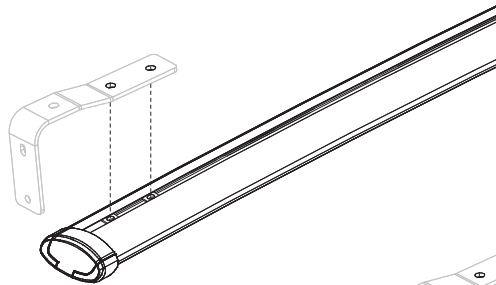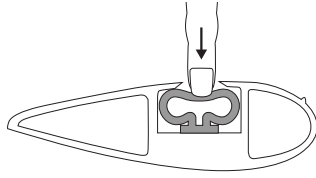

2

Noting the orientation of the awning brackets as pictured, check that awning will not interfere with opening doors once fitted. If there is enough clearance, secure the 2 x awning brackets to the M8 slot nuts in the bar channels as pictured.

Tighten to 4 Nm with 6 mm allen key provided or a suitable torque wrench.

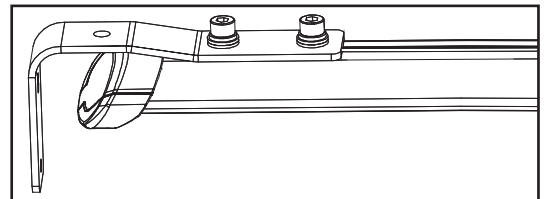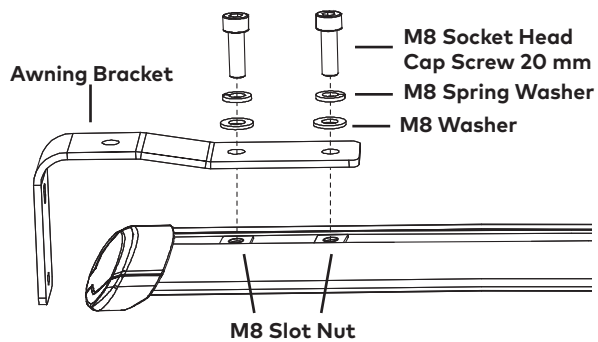


FOR AWNING MOUNTING INSTRUCTIONS, PROCEED TO PAGE 7

INSTALLING AWNING BRACKETS TO OTHER HEAVY DUTY BARS

1

Assemble 1x M8 spring washer, 1x M8 washer onto each **M8 25 mm socket head cap screw** and insert into the top two holes on bracket.


Pre-thread the M8 T-nuts onto cap screws in the orientation shown and drop bracket assembly into bar channel.

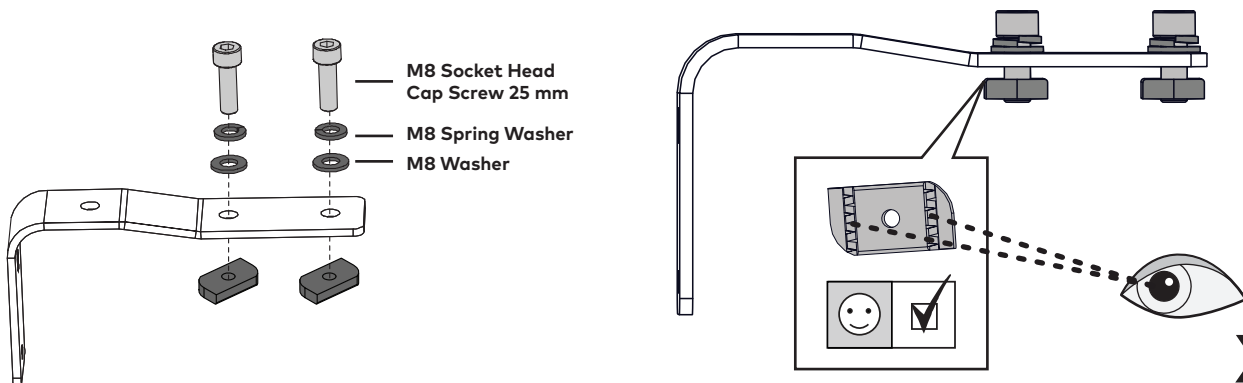

2

Noting the orientation of the awning brackets as pictured, check that awning will not interfere with opening doors once fitted. If there is enough clearance, secure the 2 x awning brackets to the M8 T-nuts in the bar channels as pictured.

Tighten to 4 Nm with a 6 mm allen key or a suitable torque wrench and ensure the nuts rotate 90 degrees when tightened.

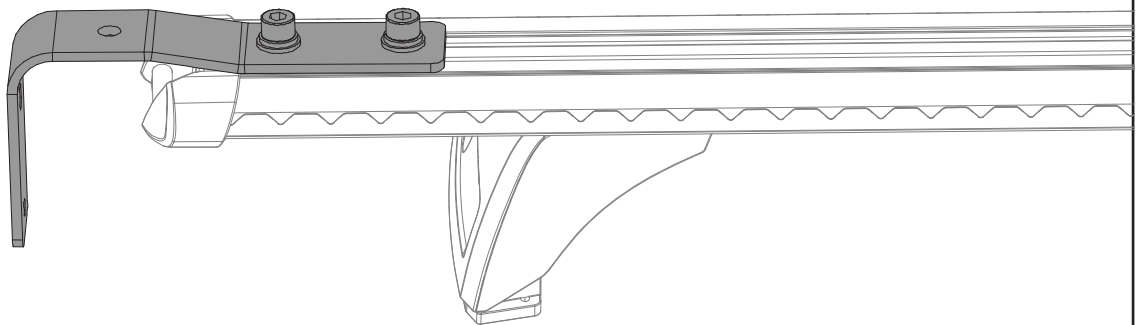


FOR AWNING MOUNTING INSTRUCTIONS, PROCEED TO PAGE 7

SHADE AWNING MOUNTING INSTRUCTIONS

1


Measure the distance of the centre of the holes in the awning brackets between each crossbar.

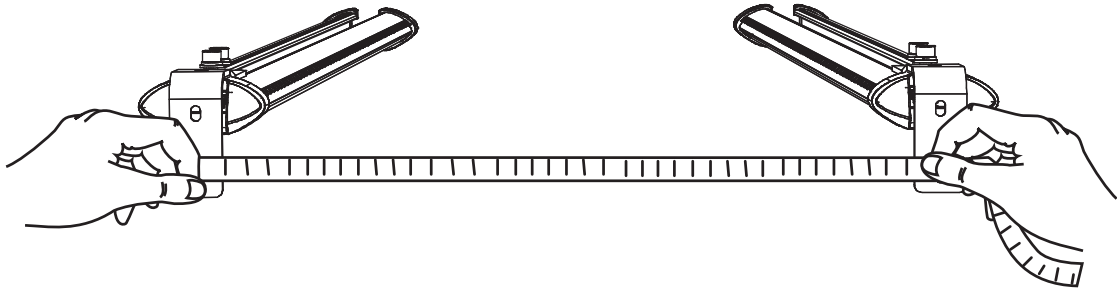

2


Slide 2 x M6 hex bolts into the top channel and 2 x M6 hex bolts into the bottom channel of the mounting extrusion on the rear of the awning.

Once all four bolts have been placed into the extrusion, use the measurement from the previous step to position the bolts so that they align with the holes on the awning brackets.

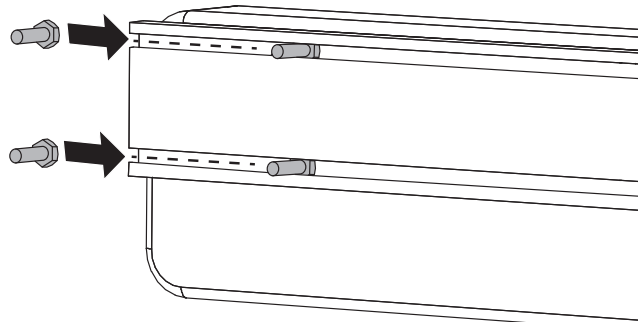


3

Secure each M6 hex bolt to the awning brackets using 1 x M6 washer and 1 x M6 Nyloc nut. Tighten all bolts to 4 Nm with a 10 mm spanner or a suitable torque wrench.

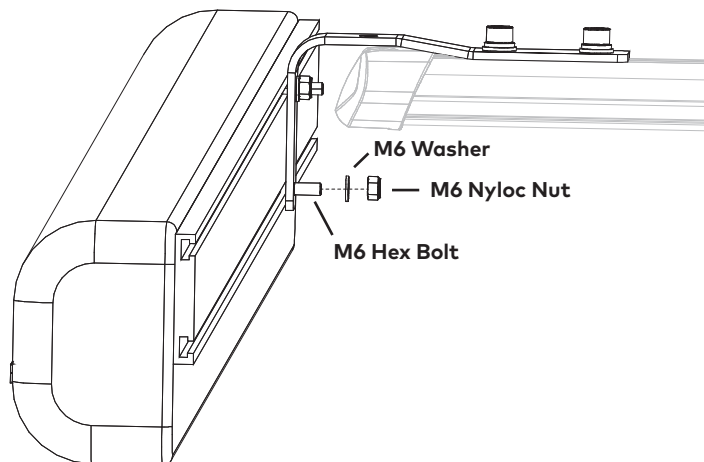

4

Your awning is now fitted and ready for use. Please refer to your awning's set up instructions for use.

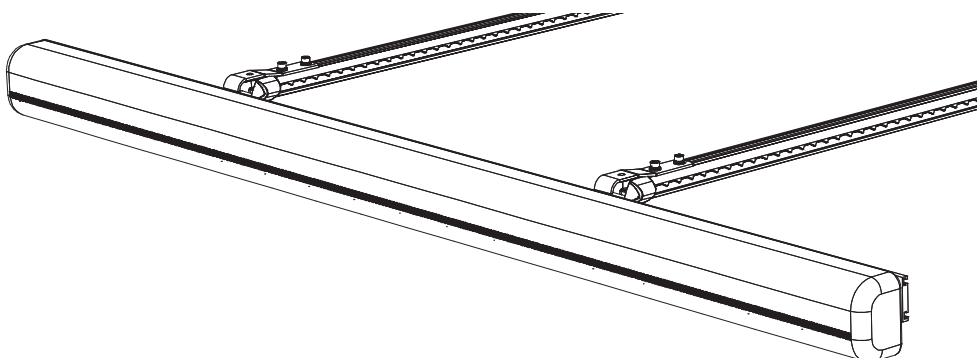


OPTIONAL ACCESSORY INSTALLATIONS



ACCESSORIES SOLD SEPARATELY

RECOVERY TRACK MOUNT.

The Recovery Track Mount (8005031) can be mounted in tandem with the awning brackets as shown.

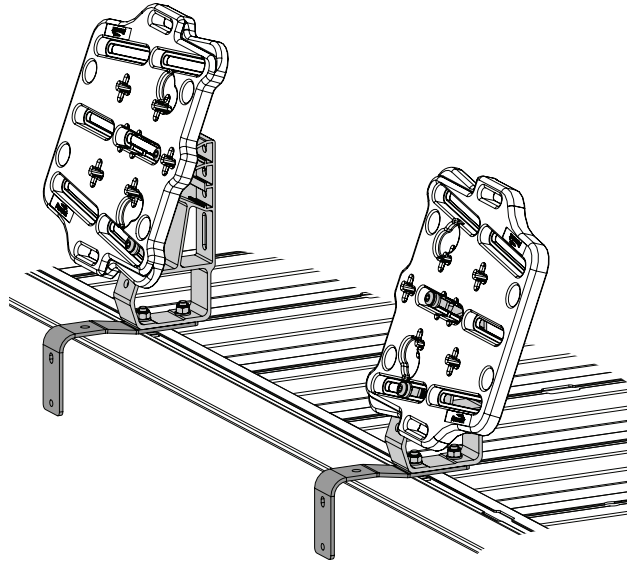

RECOMMENDATIONS

- Check accessory is securely attached whenever you refit it to the vehicle. If the unit feels loose, refer to the fitting instructions and readjust.
- Regularly check all fasteners. This includes all attached accessories and roof racks.
- Follow instructions supplied with your awning for its specific care instructions.

SAFETY

- A loaded roof rack system can alter the performance of your vehicle. Be especially aware of the effects of side winds, changing of direction, and braking performance. Avoid rapid acceleration and deceleration. Drive carefully.
- Make sure all loads are securely fastened with non-elastic straps. Check regularly during longer journeys.
- Never drive into a car wash with a roof rack system or accessories fitted.
- Do not exceed the vehicle manufacturer's roof load rating. Total load equals weight of roof racks + accessories + cargo/equipment.



www.yakima.com.au
www.yakima.co.nz
www.yakima.com
www.yakima.eu

YAKIMA AUSTRALIA PTY LTD

17 Hinkler Court
Brendale, QLD 4500
Australia
1800 143 548

YAKIMA PRODUCTS, INC.

4101 Kruse Way
Lake Oswego, OR
97035-2541
USA
888 925 4621
yakima.com/support